

- ① Insert key into Single Peg Lock. Turn the key clockwise (to the right), to release barrel and then remove the key.
- ② To open, rotate the right side of hinged portion of Single Peg Lock upward.
- ③ Select a peg hook to protect. Place Single Peg Lock over the peg hook.
- ④ Rotate the hinged portion of the Single Peg Lock downwards, to clamp onto peg hook.
- ⑤ Push the barrel back into the Single Peg Lock until it snaps into place to lock.
NOTE: DO NOT MISPLACE OR LOSE KEYS.
- ⑥ Single Peg Lock is installed.

TO REMOVE SINGLE PEG LOCK FROM HOOK

Insert key into Single Peg Lock. Turn the key clockwise (to the right), to release barrel and then remove the key. Slide the Single Peg Lock off of the peg hook.

