

Slide Hanger Clips into top track of banner hanger.

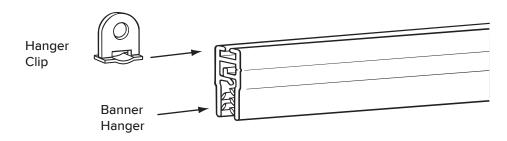


(2) Start at one end of banner hanger. Pryopen hinged side.Work your way down until banner is open. Insert banner hanger, snap shut to lock banner in place.

> **NOTE:** See illustration at right to determine how far to insert banner into banner hanger. Inserting banner too far into banner hanger may damage its hinge.

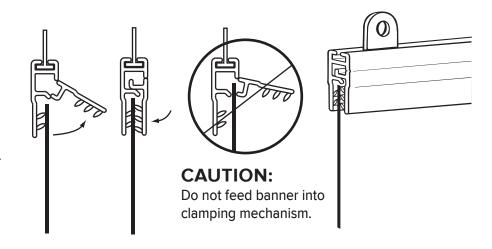

- (3) Twist Sure-Twist® Ceiling Loop onto ceiling grid. NOTE: As you twist the Ceiling Loop into place a "Click" sound will let you know that the Ceiling Loop is secure.
- (4) Insert Double C-Hook through holes of Hanger Clip and Sure-Twist® Ceiling Loop.
- (5) Installation is complete.

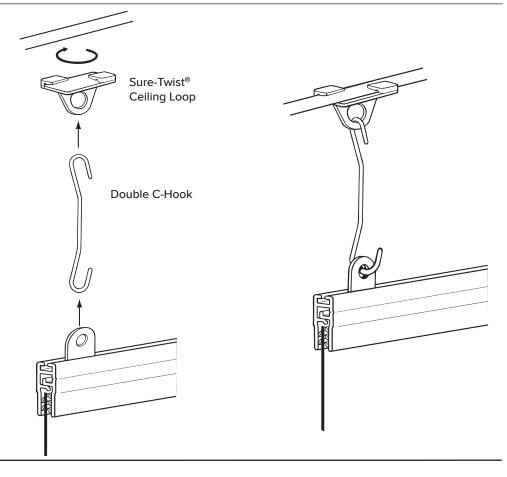

For more information, call 800.422.2547 visit www.siffron.com

