



- 1. Expand easel (fig. A).
- 2. Align holes on back leg and insert carriage bolt and wingnut (fig. B).
- 3. Align holes on front legs and attach easel card tray using carriage bolts and winguts (fig. C).

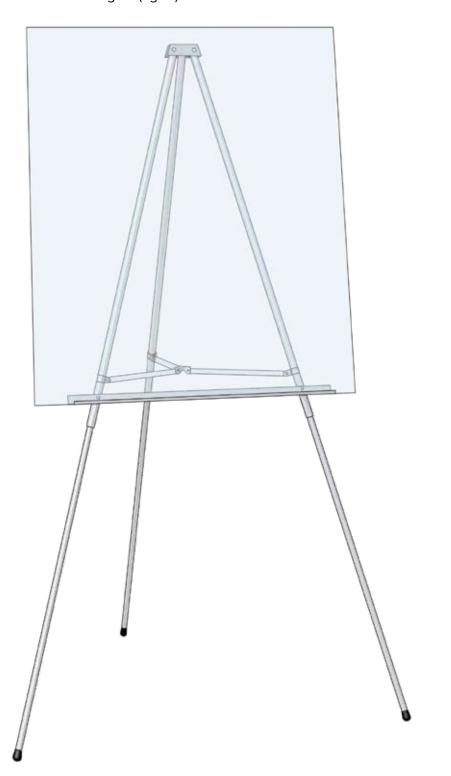

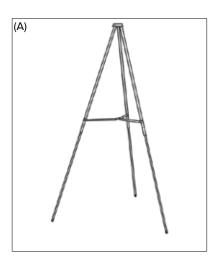

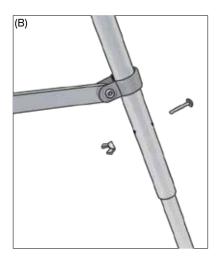

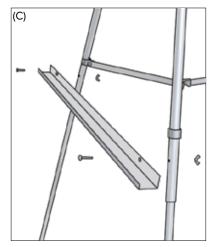

20190517

