Riser

GRAPHIC

**①** Insert graphic into c-channel.

Extension

GRAPHIC
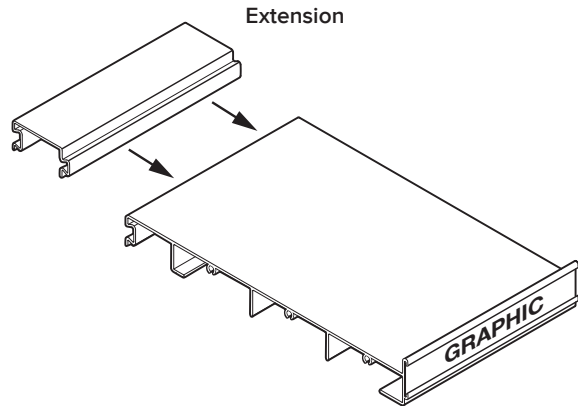
② **OPTIONAL**
If using extension(s), slide or snap it/them
into back of the riser.

End Cap

GRAPHIC
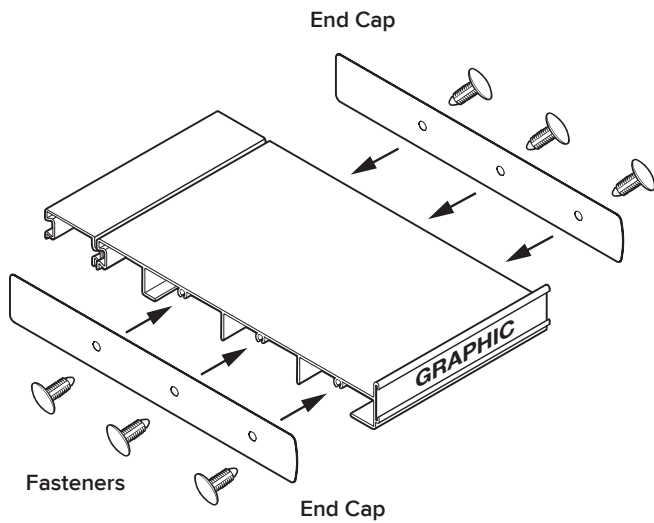
Fasteners

End Cap

③ Insert fasteners into holes and
attach end caps to sides of riser.

GRAPHIC
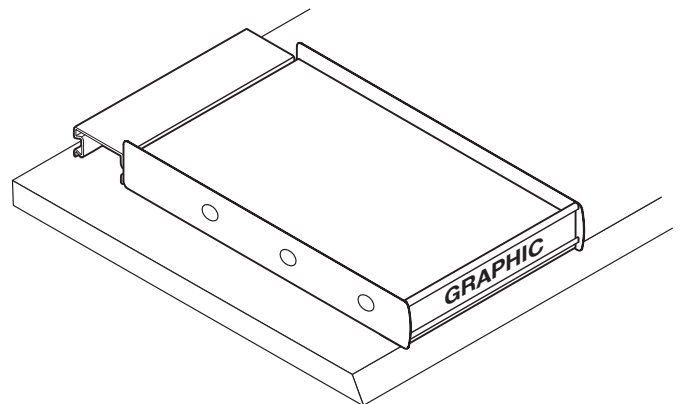
④ Place assembled riser on shelf.
Installation is complete.

20190311

siffron™
always on