



Fresh-Fit® Thin Profile Shelving System – Peg Hook Mount Bar

Installation Instructions

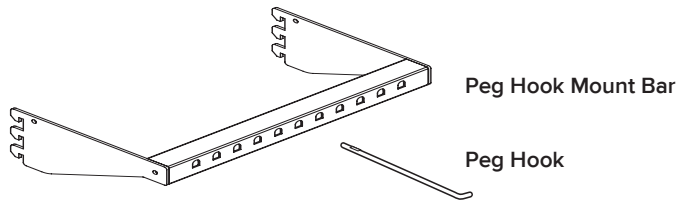

① Place brackets of 12" W Mount Bar into Fresh-Fit® Grid Assembly.

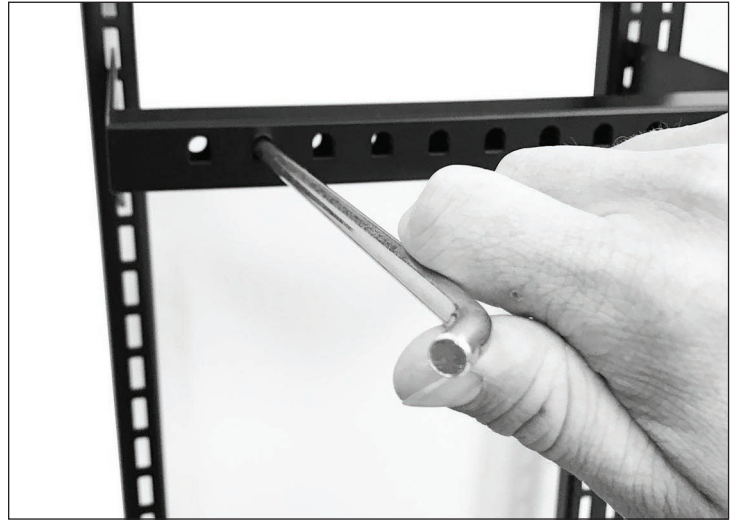

② Turn peg hook sideways (so bend at front end of hook points left or right) and insert peg fully through both front slot and rear hole.



③ Turn peg hook back upright (so bend at front end points upward).



④ Space peg hooks out as desired.

20190311

For more information,
call **800.422.2547**
visit **www.siffron.com**

Z504310251

siffron[™]
always on