


SuperGrip® Headers


Gondola Upright Installation



1. Insert left end of sign into grippers of left End Connector. Insert right end of sign into grippers of right End Connector.

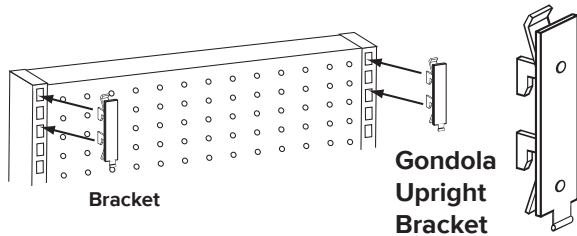

2. Insert Bracket hooks into top gondola slots, then push down to secure Bracket.

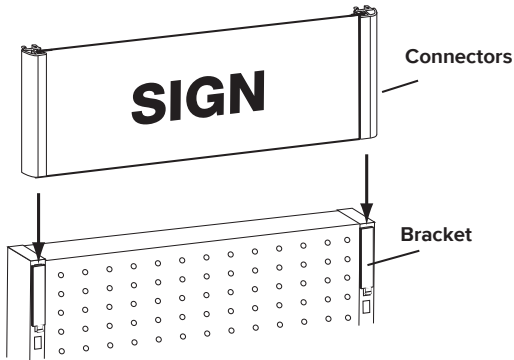

3. **NOTE:** The channel on the back of the Connector slides over the Bracket. Slide Connectors down onto Brackets.




4. Installation is complete.

800.422.2547
www.siffron.com


Pegboard Installation



1. Insert left end of sign into grippers of left End Connector. Insert right end of sign into grippers of right End Connector.

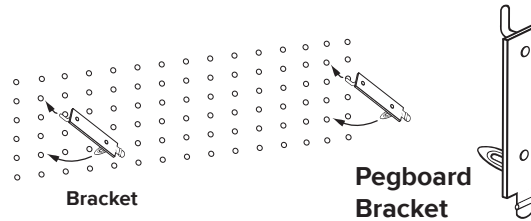

2. Rotate top hook of Bracket into hole. Rotate down and push bottom pin of Bracket into hole.

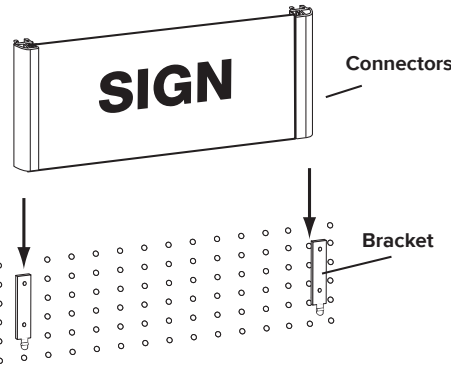


3. **NOTE:** The channel on the back of the Connector slides over the Bracket. Slide Connectors down onto Brackets.




4. Installation is complete.


Slatwall Installation

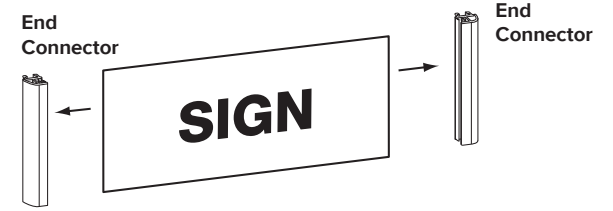

1. Insert left end of sign into grippers of left End Connector. Insert right end of sign into grippers of right End Connector.

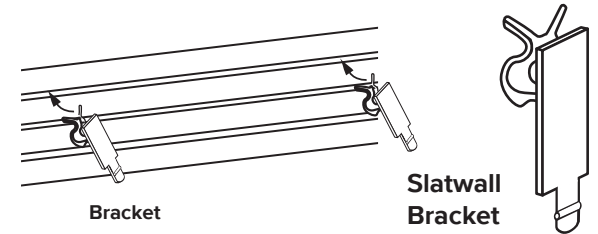

2. Insert Bracket up into slatwall opening. Rotate Bracket down to secure in place.

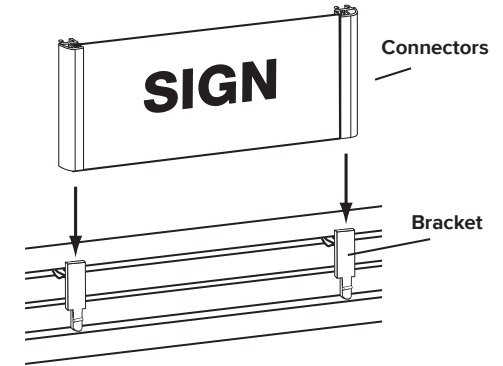

3. **NOTE:** The channel on the back of the Connector slides over the Bracket. Slide Connectors down onto Brackets.



4. Installation is complete.